

VT1000 S

Vibrating-blade microtome

Instructions for Use English

Order No.: 14 0472 80101 - Revision L

Always keep this manual with the instrument. Read carefully before working with the instrument.



The information, numerical data, notes and value judgments contained in this Instructions for Use represent the current state of scientific knowledge and state-of-the-art technology as we understand it following thorough investigation in this field.

We are under no obligation to update the present Instructions for Use periodically and on an ongoing basis according to the latest technical developments, nor to provide our customers with additional copies, updates etc. of this Instructions for Use.

To the extent permitted in accordance with the national legal system as applicable in each individual case, we shall not be held liable for erroneous statements, drawings, technical illustrations etc. contained in this Instructions for Use. In particular, no liability whatsoever is accepted for any financial loss or consequential damage caused by or related to compliance with statements or other information in this Instructions for Use.

Statements, drawings, illustrations and other information regarding the contents or technical details of the present Instructions for Use are not to be considered warranted characteristics of our products.

These are determined only by the contract provisions agreed between ourselves and our customers.

Leica reserves the right to change technical specifications as well as manufacturing processes without prior notice. Only in this way is it possible to continuously improve the technology and manufacturing techniques used in our products.

This document is protected under copyright laws. All copyrights to this documentation are held by Leica Biosystems Nussloch GmbH.

Any reproduction of text and illustrations (or of any parts thereof) by means of print, photocopy, microfiche, web cam or other methods – including any electronic systems and media – requires express prior permission in writing by Leica Biosystems Nussloch GmbH.

For the instrument serial number and year of manufacture, please refer to the nameplate on the back of the instrument.



Leica Biosystems Nussloch GmbH Heidelberger Str. 17 - 19 69226 Nussloch Germany Tel.: +49 - (0) 6224 - 143 0 Fax: +49 - (0) 6224 - 143 268 Web: www.LeicaBiosystems.com

Assembly contracted to Leica Microsystems Ltd. Shanghai

Table of contents

1.	Impo	ortant Information	5
	1.1	Symbols and their meanings	5
	1.2	Instrument model	
	1.3	Information	
	1.4	Qualification of personnel	
	1.5	Intended use/improper use	
2.	Safe	ty	9
	2.1	Safety notes	9
	2.2	Warnings	9
	2.3	Safety instructions for handling the instrument	
3.	Instr	ument Characteristics	11
	3.1	Technical data	
	3.2	General overview - VT1000 S	
4.	Insta	Illation	14
	4.1	Standard delivery	
	4.2	Unpacking and setting up the instrument	15
5.	Opei	ration	
	5.1	Installation site requirements	
	5.2	Setting up the instrument	
	5.3	The operating elements and their function - VT1000 S	
	5.4	Adjusting the amplitude	
	5.5	Working with the VT1000 S on a daily basis	
	5.6	Routine daily maintenance and switching off the instrument - VT1000 S	
6.	Malf	functions: Meaning and Troubleshooting	29
7.	Clea	ning and Maintenance	
	7.1	Cleaning the instrument	
	7.2	Changing the fuse	
8.	Orde	ering Information: Spare Parts, Accessory, Consumables	35
	8.1	Ordering information	
	8.2	Foot switch	
	8.3	Buffer tray	
	8.3.1	Double-walled buffer tray S	
	8.4	Magnifier, LED illumination	
	8.5	Julabo recirculating cooler/chiller FL300	
9.	War	ranty and Service	
10.	Deco	ontamination Confirmation	

1. Important Information

1.1 Symbols and their meanings

Leica Biosystems GmbH assumes no liability for consequential loss or damage due to failure to observe the following instructions, particularly in relation to transportation and package handling, and failure to observe the instructions for handling the instrument carefully.

Symbol:	Title of the symbol:	Warning
\triangle	Description:	If this danger is not avoided, then this may result in death or serious injury.
Symbol:	Title of the symbol:	Caution
\wedge	Description:	Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.
Symbol:	Title of the symbol:	Note
	Description:	Indicates a situation with the potential for property damage which, if not avoided, could result in damage to the machine or something in its vicinity.
Symbol:	Title of the symbol:	Item number
→ "Fig. 7 - 1"	Description:	Item numbers for numbering illustrations. Numbers in red refer to item numbers in illustrations.
Symbol:	Title of the symbol:	Function key
<u>Start</u>	Description:	Software symbols that have to be pressed on the input screen are displayed as bold, gray and underlined text.
Symbol:	Title of the symbol:	China ROHS
2 5	Description:	Environmental protection symbol of the China RoHS directive. The number in the symbol indicates the "Environment-friendly Use Period" of the product in years. The symbol is used if a substance restricted in China is used in excess of the maximum permitted limit.
Symbol:	Title of the symbol:	WEEE symbol
	Description:	The WEEE symbol, indicating separate collection for WEEE - Waste of electrical and electronic equipment, consists of the crossed-out wheeled bin (§ 7 ElektroG).

Important Information

Symbol:

1



Symbol:



Symbol:

CE

Symbol:



Symbol:



Symbol:



Symbol:



Symbol:



Symbol:



Symbol:



Title of the symbol: Description:	Manufacturer Indicates the manufacturer of the medical product.
Title of the symbol: Description:	Manufacturing date Indicates the date when the medical device was manufactured.
Title of the symbol:	CE Compliance
Description:	The CE marking is the manufacturer's declaration that the medical product meets the requirements of the applicable EC directives.
Title of the symbol:	Observe the Instructions for Use
Description:	Indicates the need for the user to consult the instructions for use.
Title of the symbol:	Order No.
Description:	Indicates the manufacturer's catalog number so that the medical device can be identified.
Title of the symbol:	Serial number
Description:	Indicates the manufacturer's serial number so that a specific medical device can be identified.
Title of the symbol:	Fragile, handle with care
Description:	Indicates a medical device that can be broken or damaged if not handled carefully.
Title of the symbol:	Store dry
Description:	Indicates a medical device that needs to be protected from moisture.
Title of the symbol:	This way up
Description:	Indicates correct upright position of the transport package.
Title of the symbol:	Stack limit
Description:	The largest number of identical packages allowed to be stacked; "2" stands for the number of permitted packages.

1

Symbol:	Title of the symbol:	Temperature limit for transport
-29°C	Description:	Indicates the temperature limits for transport to which the medical device can be safely exposed.
Symbol:	Title of the symbol:	Temperature limit for storage
+5°C	Description:	Indicates the temperature limits for storage to which the medical device can be safely exposed.
Symbol:	Title of the symbol:	Humidity limitation for transport and storage
10 %	Description:	Indicates the range of humidity for transport and storage to which the medical device can be safely exposed.
Symbol:	Title of the symbol:	Tilt indicator
	Description:	Tip-n-Tell indicator to monitor whether the shipment has been transported and stored in upright position according to your requirements. With a pitch of 60° or more, the blue quartz sand flows into the arrow-shaped indicator window and sticks there permanently.
		Improper handling of the shipment is immediately detectable and can be proven definitively.
Symbol:	Title of the symbol:	Shockdot Impact Indicator
	Description:	In the Shockwatch system, a shock dot shows shocks or impacts that are above a specified intensity through red coloration. Exceeding a defined acceleration (g value) causes the indicator tube to change color.
Symbol:	Title of the symbol:	Recycling
	Description:	Indicates, that the item can be recycled where correct facilities exist.

Symbol:



Title of the symbol: Description: Regulatory Compliance Mark (RCM)

The Regulatory Compliance Mark (RCM) indicates a device's compliance with applicable ACMA technical standards of New Zealand and Australia - that is, for telecommunications, radio communications, EMC and EME.

1.2 Instrument model

All information provided in these Instructions for Use applies only to the instrument type indicated on the title page. A nameplate indicating the instrument serial number is attached to the rear side of the instrument.

1.3 Information

When making inquiries, please specify correctly:

- Instrument model
- Serial number

1.4 Qualification of personnel

The VT1000 S should be operated by trained laboratory personnel only. The instrument is intended for professional use only.

All laboratory personnel designated to operate this instrument must read these Instructions for Use carefully and must be familiar with all technical features of the instrument before attempting to operate it.

1.5 Intended use/improper use

The VT1000 S is used for sectioning in the fields of medicine, biology and industry, and is especially designed for sectioning fixed or unfixed fresh tissue in a buffer solution.



Warning

The VT1000 S may be used for research purposes only. Sections made using the VT1000 S must NOT be used for diagnostics!

The instrument must be used exclusively according to the instructions contained in these Instructions for Use.

Any other use of the instrument is considered improper.

2. Safety



Warning

The safety and caution notes in this chapter must be observed at all times. Be sure to read these notes even if you are already familiar with the operation and use of other Leica products.

2.1 Safety notes

These Instructions for Use includes important information related to the operating safety and maintenance of the instrument.

The Operating Manual is an important part of the product, and must be read carefully prior to startup and use and must always be kept near the instrument.

This instrument has been built and tested in accordance with the safety requirements for electrical equipment for measurement, control, and laboratory use.

To maintain this condition and ensure safe operation, the user must observe all notes and warnings contained in these Instructions for Use.

The current EC Declarations of Conformity can be found on the Internet: www.LeicaBiosystems.com



These Instructions for Use must be appropriately supplemented as required by the existing regulations on accident prevention and environmental safety in the operator's country.

\triangle

Warning

Note

The protective devices located on the instrument and the accessories must not be removed or modified. The instrument must only be opened and repaired by service technicians authorized by Leica.

2.2 Warnings

The safety devices installed in this instrument by the manufacturer only constitute the basis for accident prevention. Operating the instrument safely is, above all, the responsibility of the owner, as well as the designated personnel who operate, service or clean the instrument.

To ensure trouble-free operation of the instrument, make sure to comply with the following instructions and warnings.



2.3 Safety instructions for handling the instrument

Danger

⚠

Extremely sharp blades pose risk of injury when touched!

Caution

Warning

Fresh tissue poses risk of infection!

Λ

When not in use, cover magnifier with corresponding lid to avoid risk of fire.

\triangle

Avoid touching live parts under any circumstances!

Proper handling


- Be sure to handle knives and blades very cautiously!
- Never touch the cutting edge of knives and blades!
- Do not leave knives, blades and bladed knife holders unprotected.
- All appropriate safety precautions must be met to avoid the risk of infection.
- Protective clothing according to safety regulations for "Working with harmful substances" (Safety mask, gloves, protective clothing) must be worn!
- Cover the magnifier during work breaks as it may act as a burning glass when not covered!
- In case of emergency, press the red **EMERGENCY STOP** switch (at the right side of the instrument). To release the switch, turn it in the direction of the arrow.
- The instrument may be opened by authorized service personnel only.
- Before removing the cover, ensure that the instrument is unplugged.

3. Instrument Characteristics

3.1 Technical data

Amplitudeadjustable in 5 steps: 0.2; 0.4; 0.6; 0.8; 1 mmSectioning speed (± 10 %)0.025 - 2.5 mm/sReturn stroke speed (± 10 %)5 mm/sTotal vertical specimen stroke15 mm (motorized)Sectioning range1 - 40 mm (adjustable)Specimen retraction0 - 999 µm (adjustable; can be deactivated)Maximum specimen size:33 x 40 mmSpecimen orientation330°Section thickness selection1 - 999 µm, in 1-µm stepsSection thickness selection1 - 999 µm, in 1-µm stepsAdmient conditions2 x magnificationOperating temperature rangemin. 5 °C to max. 40 °CRelative humiditymax. 80 %Heightup to 2000 m above sea levelElectrical data50 < 60 HzPower draw50 < 60 HzPower draw50 VAMains fuseT 1.25 APollution degree2Overvoltage installation categoryIIOverload protectionyesInternal current limiter of electronicsyesUnancettiongesUservoltage installation categoryIIOverload protectiongesUservoltage installation categoryIIUservoltage	General data	
Sectioning speed (± 10 %)0.025 - 2.5 mm/sReturn stroke speed (± 10 %)5 mm/sTotal vertical specimen stroke15 mm (motorized)Sectioning range1 - 40 mm (adjustable)Specimen retraction0 - 999 µm (adjustable; can be deactivated)Maximum specimen size:33 x 40 mmSpecimen orientation330°Section thickness selection1 - 999 µm, in 1-µm stepsMagnifier, assy. (standard accessory of the configured instrument)2 x magnificationAmbiet conditions2 x magnificationOperating temperature rangemin. 5 °C to max. 40 °CRelative humiditymax. 80 %Heightu b2000 m above sea levelElectrical data50 < 60 Hz	Sectioning frequency (± 10 %)	0 - 100 Hz
Return stroke speed (± 10 %)5 mm/sTotal vertical specimen stroke15 mm (motorized)Sectioning range1 - 40 mm (adjustable)Specimen retraction0 - 999 µm (adjustable; can be deactivated)Maximum specimen size:330°with standard knife holder33 x 40 mmSpecimen orientation330°Section thickness selection1 - 999 µm, in 1-µm stepsMagnifier, assy. (standard accessory of the configured instrument)2 x magnificationAmbient conditionsuto 2000 m above sea levelPoerating temperature rangemin. 5 °C to max. 40 °CRelative humiditymax. 80 %Heightuto 2000 m above sea levelElectrical dataElectrical dataRated voltage range (± 10 %)50 - 60 HzNominal frequency (± 10 %)50 - 60 HzPower draw50 VAMains fuse1 1.25 APollution degree2Qvervoltage installation categoryIIQverload protectionyesInternal current limiter of electronicsyesL x W x H480 mm x 360 mm x 200 mmHeight with magnifier support285 mmWeight:(without magnifier support)(without magnifier support)17 kg(magnifier support only)2 kg	Amplitude	adjustable in 5 steps: 0.2; 0.4; 0.6; 0.8; 1 mm
Total vertical specimen stroke15 mm (motorized)Sectioning range1 - 40 mm (adjustable)Specimen retraction0 - 999 µm (adjustable; can be deactivated)Maximum specimen size:33 × 40 mmwith standard knife holder33 × 40 mmSpecimen orientation330°Section thickness selection1 - 999 µm, in 1-µm stepsMagnifier, assy. (standard accessory of the configured instrument)2 x magnificationAmbient conditions2 x magnificationOperating temperature rangemin. 5 °C to max. 40 °CRelative humiditymax. 80 %Heightup to 2000 m above sea levelElectrical data100 V - 240 VNominal frequency (± 10 %)50 - 60 HzPower draw50 VAMains fuseT 1.25 APollution degree2Overvoltage installation categoryIIOverload protectionyesInternal current limiter of electronicsyesDimensionsLL x W x H480 mm x 360 mm x 200 mmHeight with magnifier support285 mmWeight:(without magnifier support)(without magnifier support)17 kg	Sectioning speed (± 10 %)	0.025 - 2.5 mm/s
Sectioning range1 - 40 mm (adjustable)Specimen retraction0 - 999 μm (adjustable; can be deactivated)Maximum specimen size:33 x 40 mmwith standard knife holder33 x 40 mmSpecimen orientation30°Section thickness selection1 - 999 µm, in 1-µm stepsMagnifier, assy. (standard accessory of the configured instrument)2 x magnificationAmbient conditions2 x magnificationOperating temperature rangemin. 5 °C to max. 40 °CRelative humiditymax. 80 %Heightup to 2000 m above sea levelElectrical dataElectrical dataRated voltage range (± 10 %)100 V - 240 VNominal frequency (± 10 %)50 - 60 HzPower draw50 VAMains fuseT 1.25 APollution degree2Overvoltage installation categoryIIOverload protectionyesInternal current limiter of electronicsyesDimensionsLL x W x H480 mm x 360 mm x 200 mmHeight with magnifier support285 mmWeight:(without magnifier support)(without magnifier support)17 kg	Return stroke speed (± 10 %)	5 mm/s
Specimen retraction0 - 999 µm (adjustable; can be deactivated)Maximum specimen size:with standard knife holder33 x 40 mmSpecimen orientation330°Section thickness selection1 - 999 µm, in 1-µm stepsSection thickness selection2 x magnificationAmbient conditions2 x magnificationOperating temperature rangemin. 5 °C to max. 40 °CRelative humiditymax. 80 %Heightup to 2000 m above sea levelElectrical dataElectrical dataRated voltage range (± 10 %)100 V - 240 VNominal frequency (± 10 %)50 - 60 HzPower draw50 VAMains fuseT 1.25 APollution degree2Querolad protectionyesInternal current limiter of electronicsyesDimensionsLL x W x H480 mm x 360 mm x 200 mmHeight with magnifier support285 mmWeight:(without magnifier support)Yithout magnifier support only)2 kg	Total vertical specimen stroke	15 mm (motorized)
Maximum specimen size:with standard knife holder33 x 40 mmSpecimen orientation330°Section thickness selection1 - 999 µm, in 1-µm stepsMagnifier, assy. (standard accessory of the configured instrument)2 x magnificationAmbient conditions2 x magnificationOperating temperature rangemin. 5 °C to max. 40 °CRelative humiditymax. 80 %Heightup to 2000 m above sea levelElectrical data100 V - 240 VNominal frequency (± 10 %)50 - 60 HzPower draw50 VAMains fuseT 1.25 APollution degree2Overvoltage installation categoryIIOverload protectionyesInternal current limiter of electronicsyesDimensions285 mmL x W x H480 mm x 360 mm x 200 mmHeight with magnifier support17 kg(without magnifier support only)2 kg	Sectioning range	1 - 40 mm (adjustable)
with standard knife holder33 x 40 mmSpecimen orientation330°Section thickness selection1 - 999 µm, in 1-µm stepsMagnifier, assy. (standard accessory of the configured instrument)2 x magnificationAmbient conditions2 x magnificationOperating temperature rangemin. 5 °C to max. 40 °CRelative humiditymax. 80 %Heightup to 2000 m above sea levelElectrical dataElectrical dataRated voltage range (± 10 %)50 - 60 HzNominal frequency (± 10 %)50 - 60 HzPower draw50 VAMains fuseT 1.25 APollution degree2Overvoltage installation categoryIIOverload protectionyesInternal current limiter of electronicsyesDimensions285 mmL x W x H480 mm x 360 mm x 200 mmHeight with magnifier support17 kg(without magnifier support only)2 kg	Specimen retraction	0 - 999 µm (adjustable; can be deactivated)
Specimen orientation330°Specimen orientation1 - 999 µm, in 1-µm stepsMagnifier, assy. (standard accessory of the configured instrument)2 x magnificationAmbient conditions2 x magnificationOperating temperature rangemin. 5 °C to max. 40 °CRelative humiditymax. 80 %Heightup to 2000 m above sea levelElectrical dataElectrical dataRated voltage range (± 10 %)100 V - 240 VNominal frequency (± 10 %)50 - 60 HzPower draw50 VAMains fuseT 1.25 APollution degree2Overvoltage installation categoryIIOverload protectionyesInternal current limiter of electronicsyesDimensions285 mmL x W x H480 mm x 360 mm x 200 mmHeight with magnifier support17 kg(magnifier support only)2 kg	Maximum specimen size:	
Section thickness selection1 - 999 µm, in 1-µm stepsMagnifier, assy. (standard accessory of the configured instrument)2 x magnificationAmbient conditionsus magnificationQperating temperature rangemin. 5 °C to max. 40 °CRelative humiditymax. 80 %Heightup to 2000 m above sea levelElectrical dataElectrical dataRated voltage range (± 10 %)100 V - 240 VNominal frequency (± 10 %)50 - 60 HzPower draw50 VAMains fuseT 1.25 APollution degree2Overvoltage installation categoryIIOverload protectionyesInternal current limiter of electronicsyesDimensionsL x W x HL x W x H480 mm x 360 mm x 200 mmHeight with magnifier support17 kg(without magnifier support)17 kg	with standard knife holder	33 x 40 mm
Magnifier, assy. (standard accessory of the configured instrument)2 x magnificationAmbient conditionsmin. 5 °C to max. 40 °CQperating temperature rangemin. 5 °C to max. 40 °CRelative humiditymax. 80 %Heightup to 2000 m above sea levelElectrical data50 - 60 HzRated voltage range (± 10 %)50 - 60 HzNominal frequency (± 10 %)50 - 60 HzPower draw50 VAMains fuseT 1.25 APollution degree2Overvoltage installation categoryIIOverload protectionyesInternal current limiter of electronicsyesDimensions2L x W x H480 mm x 360 mm x 200 mmHeight with magnifier support17 kg(without magnifier support)17 kg	Specimen orientation	330°
configured instrument)Ambient conditionsOperating temperature rangemin. 5 °C to max. 40 °CRelative humiditymax. 80 %Heightup to 2000 m above sea levelElectrical dataElectrical data100 V - 240 VNominal frequency (± 10 %)50 - 60 HzPower draw50 VAMains fuseT 1.25 APollution degree2Overvoltage installation categoryIIInternal current limiter of electronicsyesInternal current limiter of electronicsyesL x W x H480 mm x 360 mm x 200 mmHeight with magnifier support17 kg(without magnifier support)17 kg	Section thickness selection	1 - 999 µm, in 1-µm steps
Operating temperature rangemin. 5 °C to max. 40 °CRelative humiditymax. 80 %Heightup to 2000 m above sea levelElectrical dataRated voltage range (± 10 %)100 V - 240 VNominal frequency (± 10 %)50 - 60 HzPower draw50 VAMains fuseT 1.25 APollution degree2Overvoltage installation categoryIIOverload protectionyesInternal current limiter of electronicsyesDimensions2L x W x H480 mm x 360 mm x 200 mmHeight with magnifier support17 kg(without magnifier support)17 kg	Magnifier, assy. (standard accessory of the configured instrument)	2 x magnification
Relative humidity max. 80 % Height up to 2000 m above sea level Electrical data Electrical data Rated voltage range (± 10 %) 100 V - 240 V Nominal frequency (± 10 %) 50 - 60 Hz Power draw 50 VA Mains fuse T 1.25 A Pollution degree 2 Overvoltage installation category II Overload protection yes Internal current limiter of electronics yes Dimensions 240 mm x 360 mm x 200 mm L x W x H 480 mm x 360 mm x 200 mm Height with magnifier support 17 kg (without magnifier support) 17 kg	Ambient conditions	
Height up to 2000 m above sea level Electrical data Rated voltage range (± 10 %) 100 V - 240 V Nominal frequency (± 10 %) 50 - 60 Hz Power draw 50 VA Mains fuse T 1.25 A Pollution degree 2 Overvoltage installation category II Overload protection yes Internal current limiter of electronics yes Dimensions 2 L x W x H 480 mm x 360 mm x 200 mm Height with magnifier support 285 mm Weight: 17 kg (without magnifier support) 17 kg	Operating temperature range	min. 5 °C to max. 40 °C
Electrical dataRated voltage range (± 10 %)100 V - 240 VNominal frequency (± 10 %)50 - 60 HzPower draw50 VAMains fuseT 1.25 APollution degree2Overvoltage installation categoryIIOverload protectionyesInternal current limiter of electronicsyesDimensions2L x W x H480 mm x 360 mm x 200 mmHeight with magnifier support285 mmWeight:17 kg(without magnifier support only)2 kg	Relative humidity	max. 80 %
Rated voltage range (± 10 %)100 V - 240 VNominal frequency (± 10 %)50 - 60 HzPower draw50 VAMains fuseT 1.25 APollution degree2Overvoltage installation categoryIIOverload protectionyesInternal current limiter of electronicsyesDimensionsVL x W x H480 mm x 360 mm x 200 mmHeight with magnifier support285 mmWeight:17 kg(without magnifier support)17 kg(magnifier support only)2 kg	Height	up to 2000 m above sea level
Nominal frequency (± 10 %)50 - 60 HzPower draw50 VAMains fuseT 1.25 APollution degree2Overvoltage installation categoryIIOverload protectionyesInternal current limiter of electronicsyesDimensionsL x W x HHeight with magnifier support285 mmWeight:	Electrical data	
Power draw50 VAMains fuseT 1.25 APollution degree2Overvoltage installation categoryIIOverload protectionyesInternal current limiter of electronicsyesDimensionsVL x W x H480 mm x 360 mm x 200 mmHeight with magnifier support285 mmWeight:V(without magnifier support)17 kg(magnifier support only)2 kg	Rated voltage range (± 10 %)	100 V - 240 V
Mains fuseT 1.25 APollution degree2Overvoltage installation categoryIIOverload protectionyesInternal current limiter of electronicsyesDimensionsVL x W x H480 mm x 360 mm x 200 mmHeight with magnifier support285 mmWeight:17 kg(without magnifier support only)2 kg	Nominal frequency (± 10 %)	50 - 60 Hz
Pollution degree2Overvoltage installation categoryIIOverload protectionyesInternal current limiter of electronicsyesDimensionsVerson March 200 mm x 200 mmL x W x H480 mm x 360 mm x 200 mmHeight with magnifier support285 mmWeight:Verson 200 mm(without magnifier support)17 kg(magnifier support only)2 kg	Power draw	50 VA
Overvoltage installation categoryIIOverload protectionyesInternal current limiter of electronicsyesDimensionsVL x W x H480 mm x 360 mm x 200 mmHeight with magnifier support285 mmWeight:17 kg(without magnifier support only)2 kg	Mains fuse	T 1.25 A
Overload protectionyesInternal current limiter of electronicsyesDimensions480 mm x 360 mm x 200 mmL x W x H480 mm x 360 mm x 200 mmHeight with magnifier support285 mmWeight:17 kg(without magnifier support only)2 kg	Pollution degree	2
Internal current limiter of electronicsyesDimensions480 mm x 360 mm x 200 mmL x W x H480 mm x 360 mm x 200 mmHeight with magnifier support285 mmWeight:17 kg(without magnifier support only)2 kg	Overvoltage installation category	II
DimensionsL x W x H480 mm x 360 mm x 200 mmHeight with magnifier support285 mmWeight:17 kg(without magnifier support only)2 kg	Overload protection	yes
L x W x H480 mm x 360 mm x 200 mmHeight with magnifier support285 mmWeight:17 kg(without magnifier support only)2 kg	Internal current limiter of electronics	yes
Height with magnifier support285 mmWeight:17 kg(without magnifier support)17 kg(magnifier support only)2 kg	Dimensions	
Weight: (without magnifier support) 17 kg (magnifier support only) 2 kg	L x W x H	480 mm x 360 mm x 200 mm
(without magnifier support)17 kg(magnifier support only)2 kg	Height with magnifier support	285 mm
(magnifier support only) 2 kg	Weight:	
	(without magnifier support)	17 kg
(total) 19 kg	(magnifier support only)	2 kg
	(total)	19 kg

3.2 General overview - VT1000 S

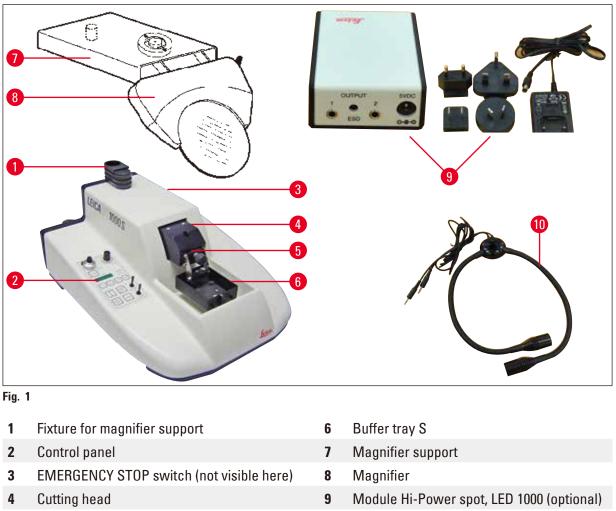

5 Knife holder

10 Module LED Hi-Power spots, 2-arm (optional)

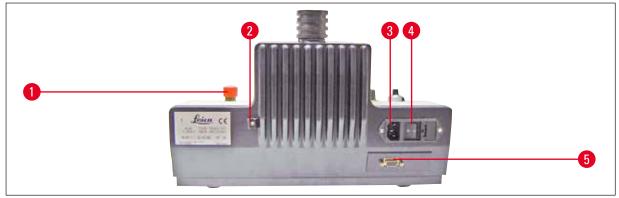


Fig. 2

- 1 EMERGENCY STOP button
- 2 Fixing device for drain tube

- 3 Connecting socket for power cord
- 4 Power switch
- 5 Connection for foot switch, 9-pole

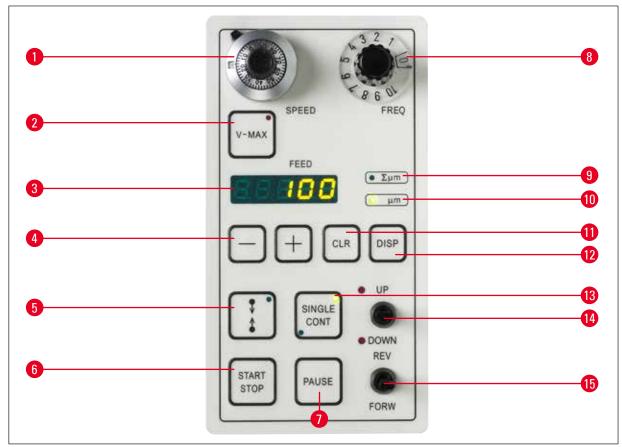


Fig. 3

1	Rotary knob for sectioning speed	8	Rotary knob for sectioning frequency
2	Button for maximum advance speed	9	LED mode indication: "Totalized section thickness"
3	Indication of selected section thickness or totalized section thickness in µm	10	LED mode indication: "Section thickness"
4	+/- selection button for section thickness (1 - 999 µm selectable), retraction and/or volume	11	CLR-Clear button
5	Button for setting the limit stops of the sectioning window	12	DISP-Programming button
6	Start button for single / continuous sectioning stroke	13	Selector button "Single/continuous stroke" (LEDs indicate selected mode)
7	Pause button - stops sectioning process	14	Toggle switch "Buffer tray height adjustment" (LEDs indicate limit positions)
		15	Toggle switch for knife forward and return stroke



4. Installation

4.1 Standard delivery

Qty	Designation	Order No.
	Basic instrument	14 0472 35612
1	Silicon tube	14 0462 27513
1	set of replacement fuses 2 x T 1.25 A	14 6943 01251
1	toolset:	
	1 Allen key, No. 2.5	14 0194 13195
	1 Allen key, No. 8.0	14 0194 04792
	1 Manipulator	14 0462 28930
1	Microtome protective cover	14 0212 04091
1	Instructions for Use printed (English, with Language CD 14 0472 80200)	14 0472 80001
	VT1000 S complete configuration	14 0472 35613
	VT1000 S basic instrument	14 0472 35612
	Specimen discs S, non orientable	14 0463 27404
	Buffer tray S	14 0462 30132
	5 Countersunk screw, M 5 x 8	14 2101 77121
	2 Hose clamps	14 0481 41952
	Knife holder S – for injector and razor blades	14 0462 30131
	Hexagon key w/handle, size 3	14 0194 04764
	1 Bottle of Cyanoacrylate adhesive	14 0371 27414
	Magnifier assy. (magnifier glass & carrier)	14 0462 31191

The country specific power cord needs to be ordered separately. Please find a list of all power cords available for your device on our website www.LeicaBiosystems.com within the product section.

Note

When ordering additional accessories, compare the parts received with the parts ordered. If the parts received do not match your order, contact the sales company responsible for your order immediately.

4.2 Unpacking and setting up the instrument

Note

Π

The packaging has two indicators, ShockDot Impact Indicator and Tilt Indicator, that indicate improper transport. When the instrument is delivered, check these first. If one of the indicators is triggered, the package was not handled as prescribed. In this case, please mark the shipping documents accordingly and check the shipment for damage.



Fig. 4

- Remove the packing strap and the adhesive
- tape (\rightarrow Fig. 4-1).
- Remove the carton lid (\rightarrow Fig. 4-2).
- Take out the accessory carton (\rightarrow Fig. 4-3).
- Take Allen key No. 8 out of the accessory carton and put it aside for later use.
- Remove the fixing carton (\rightarrow Fig. 4-4).
- Remove the outer carton wall (\rightarrow Fig. 4-5).
- Lift the instrument out of the carton by the carrying straps (→ Fig. 4-6) and place it on a suitable stable laboratory table.

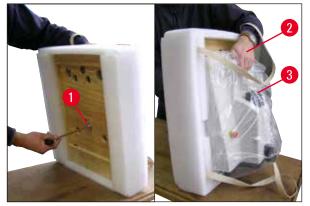


Fig. 5

Tilt the instrument including the baseplate
 (→ Fig. 5) - hold the instrument with one
 hand on the recess (→ Fig. 5-2) for the buffer
 tray! NEVER lift or hold it by the cutting head
 (→ Fig. 5-3)! Unscrew the screw (→ Fig. 5-1)
 using the size 8 Allen key provided and remove
 the base plate.



 Using both hands at the sides (→ Fig. 6), grasp the bottom of the instrument and carefully place it on a suitable laboratory table.

Fig. 6

Note

Compare with the attached packing list to make sure the delivery is complete.

Note

The transport carton and included retaining elements should be kept in case a return shipment is necessary later. To return the instrument, follow the instructions above in reverse order.

Assembling the drain tube

- Bottom of the instrument (\rightarrow Fig. 7).
- Connect the drain tube (\rightarrow Fig. 7) to the bottom of the instrument (\rightarrow Fig. 7-1).
- Ensure that the loose end of the drain tube is closed tightly with the matching stopper.
- Secure the loose end of the drain tube in the holder at the rear of the instrument (\rightarrow Fig. 7-2).


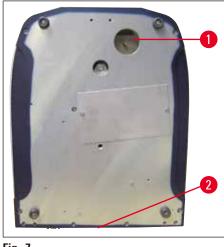


Fig. 7

Assembling the magnifier support and foot switch (optional)

- The magnifier support (\rightarrow Fig. 8-1) is packaged separately.
- Set it on the instrument as shown in (\rightarrow Fig. 8).
- Attach the optional foot switch.
- Securely plug the foot switch into the 9-pin socket (\rightarrow Fig. 8-2).



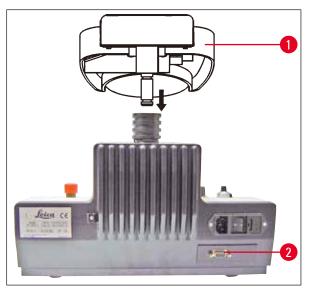



When transporting the instrument, always do so WITHOUT the magnifier support!



5. Operation

5.1 Installation site requirements

The place of installation must meet the following requirements:

- The instrument is designed for indoor use only.
- The power plug must be freely and easily accessible.
- Power supply at a distance no greater than the length of the power cable (3m) an extension cable must not be used.
- Level installation location,
- · Substrate as free of vibration as possible,
- Relative humidity should not exceed 80 %
- Room temperature consistently between +5 °C and +40 °C
- Avoid vibrations, direct sunlight, and large temperature fluctuations!

\triangle

The instrument may not be operated in hazardous locations.

\triangle

Warning

Warning

The instrument MUST be connected to a grounded power socket. Use only a provided power cable that is intended for the local power supply.

5.2 Setting up the instrument

Note

The instrument MUST be connected to a grounded power socket. Use only a provided power cable that is intended for the local power supply.



Warning

The instrument MUST be set up so that the power plug and switch are free and easily accessible at all times!



Note

The VT1000 S is equipped with a autoranging power supply to cover voltages from 100 V to 240 V. After switching on the main switch, the instrument carries out an initial startup run: The blade returns to the rear starting position after a short forward movement.

- 1. Put the main switch at the back of the instrument to the **OFF** position.
- 2. Make sure the power cable is connected correctly to the instrument.
- 3. Attach the magnifier support.
- 4. Insert the buffer tray.
- 5. Insert the knife holder.
- 6. Insert a blade into the knife holder.
- 7. Connect the magnifier support with Module LED Hi-Power spots, 2-arm, as shown in (\rightarrow Fig. 9). Insert plug (\rightarrow Fig. 9-1) of the Module LED Hi-Power spots, 2-arm, into socket (\rightarrow Fig. 9-2) at the Module Hi-Power spot, LED 1000.

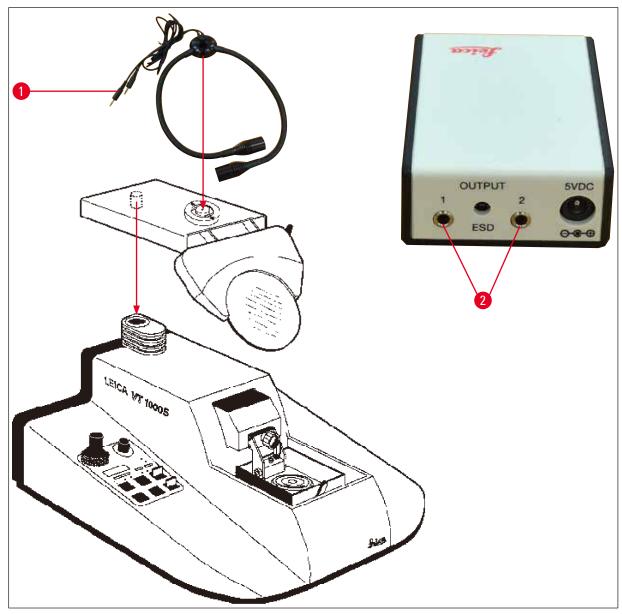


Fig. 9

- 8. Connect the optional foot switch at the rear of the instrument.
- 9. Plug the power cable into the wall socket.
- 10. Switch the instrument on (main switch).

5.3 The operating elements and their function - VT1000 S

\triangle

Caution

Practice working with the controls without a blade holder inserted. Only insert the knife holder when you are completely familiar with all control functions.



Fig. 10

SPEED		10-speed rotating potentiometer with scale
Scale setting	mm/s	Function:
0	0.00	Continuous knife feed adjustment from
0.5	0.025	0.05 - 2.5 mm/s:
1	0.050	Knife return stroke is performed at constant speed of 5 mm/s.
2	0.075	The additional locking lever (\rightarrow Fig. 10-1)
3	0.125	(lever in 12 o'clock position) prevents the
4	0.175	speed setting from being accidentally chang while sectioning is in progress.
5	0.225	while sectioning is in progress.
6	0.40	
7	0.65	
8	0.90	
9	1.30	
10	2.50	



Fig. 11

FREQ			
Scale setting	Hz		
0	0		
0.5	8		
1	10		
2	20		
3	30		
4	40		
5	50		
6	60		
7	70		
8	80		
9	90		
10	100		

Rotary knob with scale from 0 to 10 Function:

Continuous adjustment of knife sectioning frequency (vibration) from 8 - 100 Hz.



Function:

- When the <u>V-Max</u> button is activated in manual mode (LED on red light) and the <u>REV/FORW</u> button is pressed, the knife moves towards the specimen at maximum speed.
- When the **START** button is pressed, the LED in the **V-Max** button is extinguished. Sectioning starts at the speed previously selected.

Setting a sectioning window:

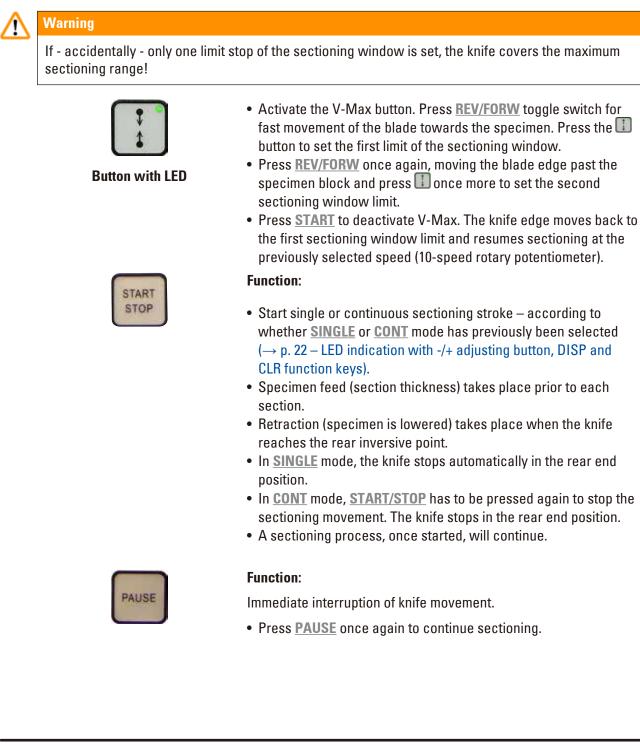




Fig. 12

Toggle switch

Function:

 
To move the knife towards the specimen.

Can also be used for manual sectioning.

Because of safety aspects the **FORW** movement is carried out only while the toggle switch is pressed and held; the **REV** movement is carried out completely once the switch has been locked into place.

To stop the **<u>REV</u>** movement before reaching the rear end position, switch the toggle switch manually back into its center position.

The **<u>REV/FORW</u>** switch can also be used to stop a sectioning stroke which has been activated by pressing the **<u>START/STOP</u>** button.



LED indication with -/+ adjusting button, DISP and CLR function keys

Function of LED indication:

Indicates the selected sectioning thickness or totalized section thickness.

Function of the -/+ button:

Selection of section thickness in $1-\mu m$ steps from 0 to 999 μm .

The specimen feed (in the preselected section thickness) takes place at the beginning of each sectioning stroke.

Function of the DISP button:

To select between two modes of operation:

"∑µm"= section thickness totalizing

"µm" = section thickness

Function of the CLR button in section thickness totalizing mode:

Sets the value indicated in the section thickness totalizing mode ($\Sigma\mu m)$ to zero.



Button with LED

Function:

Switch between

- Single stroke (1 sectioning stroke / 1 return stroke of the blade) and continuous stroke (continuous sectioning until the <u>START/</u> <u>STOP</u> button is pressed).
- To stop the blade at the rear end position in <u>CONT</u> mode press the <u>START/STOP</u> button.
- The sectioning stroke in progress will be completed and the blade will then stop at the selected end position of the sectioning range.



Function:

Toggle switch

• Motorized height adjustment of buffer tray. Maximum travel: 15 mm (= total vertical specimen stroke).

The upper and lower end positions of the buffer tray are indicated each by an audible warning signal and a red LED.

While the knife is in motion the $\underline{\text{UP/DOWN}}$ toggle switch is inoperational.

 
For the **DOWN** motion, the toggle switch can be locked in the **DOWN** position; For the **UP** motion, the switch must be pressed and held in the **UP** position.

When the lowest possible position is reached with the toggle switch being locked in **DOWN** there will be both an audible and a visible signal. Once the switch is unlocked, the buffer tray is automatically raised until both signals switch off.

• To select the retraction thickness, to deactivate retraction or to set the volume of the VT1000 S warning signal, press the following function key combinations:




- Volume adjustment:
- Select section thickness mode ("µm") by pressing the <u>DISP</u> button.
- Press the <u>CLR</u> and <u>+</u> buttons simultaneously. Display: "BE 15". The volume can now be adjusted via the <u>-/+</u> button. "0" is equivalent to no sound signal.
- To quit the programming mode, press **<u>CLR</u>**.



Adjusting the retraction

- In programming mode, press **DISP** to display the specimen retraction menu.
- Display: "LO".
- Set specimen retraction between 1 and 999 μm via the <u>-/+</u> button; or disable by selecting "0".
- The selected value will be displayed in the FEED window.
- Press <u>CLR</u> to quit the menu function.

5.4 Adjusting the amplitude

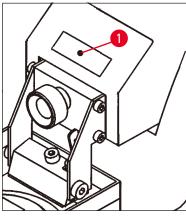

• To obtain excellent sectioning results, the amplitude requires adjustment according to the specimen type being sectioned.

To this end:

- With a No. 2.5 Allen key loosen the clamping screw (→ Fig. 17-1) and secure the eccentric on the bottom with your finger. Selectable amplitude positions are, from left to right: 0.2 mm; 0.4 mm; 0.6 mm; 0.8 mm; 1 mm.
- Slide the amplitude clamping screw to the desired amplitude position and retighten.

Fig. 17

Note

When adjusting the amplitude setting, do not remove the clamping screw, simply loosen it. The instrument is shipped with the amplitude set to 0.6 mm.

5.5 Working with the VT1000 S on a daily basis


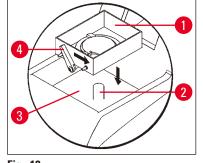


Fig. 18

- Mount the buffer tray (\rightarrow Fig. 18-1) onto the bolt (\rightarrow Fig. 18-2) inside the cooling bath (\rightarrow Fig. 18-3).
- Secure the buffer tray by relocating the clamping lever (→ Fig. 18-4) to the right (in the direction of the arrow).
- Via the <u>UP/DOWN</u> toggle switch lower the buffer tray to its lowest position (indicated by audible signal and red LED).
- Move the toggle switch back to the mid-position the audible signal stops.
- If necessary, fill crushed ice into the cooling bath (\rightarrow Fig. 18-3).
- Fill the buffer tray (\rightarrow Fig. 18-1) with cooled buffer solution.

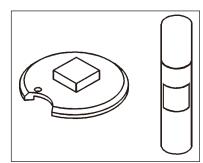

 Fix the specimen onto the specimen disc with cyanoacrylate adhesive (→ Fig. 19).

Fig. 19


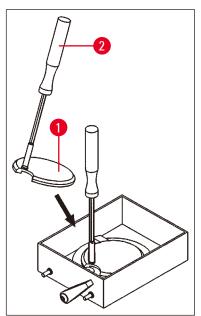


Fig. 20




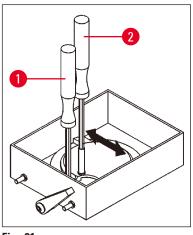

 Insert the specimen disc (→ Fig. 20-1) with the specimen into the buffer tray using the manipulator (→ Fig. 20-2).

- Use the manipulator (→ Fig. 21-2) to rotate the specimen disc into the desired position. Tighten with a No. 3 Allen key (→ Fig. 21-1).
- The clamping screw or one of the clamping devices must not be located over the gap in the specimen disc, as in these positions clamping the specimen disc is not possible.
- Remove the manipulator (\rightarrow Fig. 21-2).

Adjusting the clearance angle

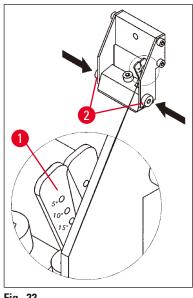

• Adjust the clearance angle (\rightarrow Fig. 22-1) of the knife holder.


To this end:

- Loosen the two lateral screws (\rightarrow Fig. 22-2) (Allen key, No. 3).
- Use the adjusting lever (\rightarrow Fig. 17-1) to select the desired clearance angle.
- Secure the selected clearance angle by tightening the two screws (\rightarrow Fig. 22-2).

Fig. 22


Note

The VT1000 S does not require the readjustment of the clearance angle every time you change the blade. Make an adjustment only if required by an application for technical reasons (e.g. different type of tissue).

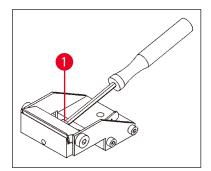

- To insert the blade, loosen the clamping screw (\rightarrow Fig. 23-1) located on the knife holder.
- Clean the blade.



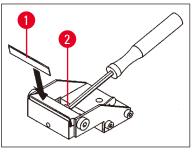


- Insert the blade into the knife holder (\rightarrow Fig. 24-1).
- Secure the blade with clamping screw (\rightarrow Fig. 24-2).

Warning

/!\

The blade must fit tightly against the entire length of the inner limit stop of the knife holder. The blade must be clamped parallel to the front edge of both knife holder clamping jaws.

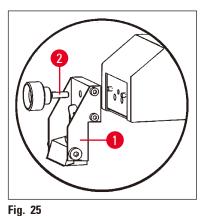

- Fix the knife holder (\rightarrow Fig. 25-1) with the knife holder clamping screw (\rightarrow Fig. 25-2).
- Use the **<u>REV/FORW</u>** rocker button to place the blade edge right behind the rear edge (from user's view) of the specimen.
- Pull the <u>UP/DOWN</u> rocker button into the UP direction and keep it in the UP position until the specimen surface is shortly below the level of the blade edge (see arrow (→ Fig. 26-1)).

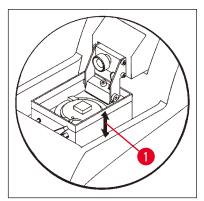



Fig. 26



- Use the \pm /- button to select a sectioning thickness for trimming.
- Select a sectioning range appropriate to the size of the specimen with the **SECTIONING WINDOW** button.
- Switch the <u>SINGLE/CONT</u> button to <u>CONT</u>. Push the <u>START/STOP</u> button.

The instrument will now trim the specimen at the selected trimming thickness until you push the **<u>START/STOP</u>** button once more.

- Once you have reached the desired specimen plane for sectioning, use the <u>+/-</u> button to select the desired thickness for sectioning.
- For sectioning proceed as follows:
- Select the desired section thickness via the <u>+/-</u> button.
- Switch the <u>SINGLE/CONT</u> button to <u>SINGLE</u>.
- Push the <u>START/STOP</u> button. The instrument will now produce a section (→ Fig. 27-1). When the section is finished, the knife will automatically stop at the rear end position behind the specimen (from the user's view).
- Pick up the section as shown on the left using a brush
 (→ Fig. 27-2) to mount it on a glass slide (→ Fig. 27-3).

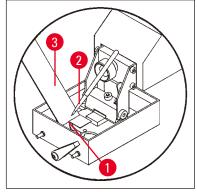





5.6 Routine daily maintenance and switching off the instrument - VT1000 S

After all daily procedures have been finished, perform the following:

- Switch off the main switch at the back of the instrument.
- Place the magnifier cover on the magnifier.
- Remove the knife holder.
- Take the blade out of the knife holder and dispose it properly and safely.
- Remove the specimen disc and lay it flat on the stage.
- Remove the specimen using a single-edge blade. Then, remove remains of cyanoacrylate adhesive from the specimen disc.
- Remove and empty out the buffer tray. Dispose of the contents of the buffer tray properly.
- Drain the cooling bath.

To do so, release the tube from its holder at the rear of the instrument and dispose of the contents of the ice bath into a suitable vessel. Then wipe off with a dry cloth.



aution

The contents of the ice bath can become contaminated if buffer solution is spilled over it.

6. Malfunctions: Meaning and Troubleshooting

Warning

⚠

When working with directional specimen discs, move the buffer tray to its lowest position directly after switching on the instrument!

Error messages/symptoms	Sources of error	Troubleshooting
Collision of knife and specimen	Clearance angle adjustment:	• Lower the specimen disc
disc.	 If a clearance angle wider than 5° is selected, specimen disc and knife edge can potentially collide with each other. 	sufficiently to prevent collision.
	• When working with directional specimen holders, knife edge and specimen holder can collide at any selected clearance angle.	 Lower the specimen disc sufficiently to prevent collision.
Audible warning signal. Return stroke is not completed.	Operating error due to locking function of the <u>REV/FORW</u> button:	 Unlock the <u>REV/FORW</u> button by pulling it back to the center
	• With the REV/FORW button locked the instrument is switched off via the power switch at the rear of the instrument and is switched on again without releasing the REV/FORW button to its center position	 position. To reactivate the return stroke movement, lock the <u>REV/FORW</u> button again (to REV position).
	• With the <u>REV/FORW</u> button locked, the instrument was switched off via the emergency stop and after that, the emergency stop was released again without releasing the <u>REV/FORW</u> button to its center	 Unlock the <u>REV/FORW</u>-button by pulling it back to the center position. To reactivate the return stroke movement, lock the <u>REV/</u> <u>FORW</u>-button again (to REV position).

position.

29

Error messages/symptoms	Sources of error	Troubleshooting	
Audible warning signal. Downward stroke is not	Operating error due to locking function of the <u>UP/DOWN</u> button:	• Release the <u>UP/DOWN</u> button to its center position.	
completed.	• With the <u>UP/DOWN</u> button locked in the DOWN position the instrument was switched off via the power switch at the rear of the instrument switched on again without releasing the <u>UP/DOWN</u> button to its center position.	 To reactivate the downward motion, activate the <u>UP/DOWN</u> button again (DOWN). 	
	 With the <u>UP/DOWN</u> button locked the instrument was switched off via the <u>EMERGENCY STOP</u> (foot switch or Emergency stop button) and after that the <u>EMERGENCY</u> <u>STOP</u> was released without unlocking the <u>UP/DOWN</u> button. 	 Release the <u>UP/DOWN</u> button to its center position. To reactivate the downward motion, activate the <u>UP/DOWN</u> button again (DOWN). 	
The feed motor stops.	The <u>EMERGENCY STOP</u> function	 Release the <u>EMERGENCY STOP</u> button. Select an operating mode and continue working. 	
Any processing step (sectioning stroke etc.) is interrupted immediately.	has been activated.		
Any UP/DOWN motion of the buffer tray is interrupted immediately.			
Any locked buttons are indicated by an audible warning signal.			
When pressing any key, the instrument gives an audible warning signal.			
In case the EMERGENCY STOP function has been activated, the instrument will remain inoperational when pressing the foot switch.			
The indication SP is displayed.			

Malfunctions: Meaning and Troubleshooting **6**

Error messages/symptoms	Sources of error	Troubleshooting
Audible warning signal. Error code E0.1xx is displayed. EQUID xx - there are several error codes,	 Button(s) jammed or defective. Locking function <u>/REV</u> or <u>REV/</u> <u>FORW</u> button defective. Error on the <u>UP/DOWN</u> button; <u>DOWN</u> locking function. 	 Push the button several times to unlock; have defective button replaced by the Technical Service.
00 - there is only one error code.		
Error code E0.200 is displayed.	 Feed mechanism defective. 	• Switch off the instrument; call the Technical Service.
Error code E0.300 is displayed.	• Important electronic component defective.	• Switch off the instrument; call the Technical Service.
Error code E0.400 is displayed. 돈요먹요.	• Feed motor defective.	• Switch off the instrument; call the Technical Service.
Error code E.05xx is displayed.	 Light barrier error (forward feed) 	• Switch off the instrument; call the Technical Service.
Audible warning signal. Error code E0.600 is displayed. E0.500	 Light barrier error (section thickness feed) 	• Switch off the instrument; call the Technical Service.
Audible warning signal. Error code E0.700 is displayed for approx. 2 secs.	 Software detected severe hardware fault. 	• Switch off the instrument; call the Technical Service.
Audible warning signal. Error code E0.9xx is displayed.	• STM32 Watch dog reset.	 Instrument can be used as normal after restart. In case of further problems, call the Technical Service.

LU3UU

Error messages/symptoms	Sources of error	Troubleshooting
Audible warning signal. Optical signal via red LED.	• The upper limit of the specimen feed has been reached.	 Leave the upper limit position (Switch the <u>UP/DOWN</u> button in <u>DOWN</u> direction). Mount a new specimen onto the specimen holder and start again.
	 The lower limit of the specimen level has been reached (height adjustment of specimen via buffer tray). 	• After unlocking the DOWN position the buffer tray is automatically raised until the audible and optical signals turn off.
Audible warning signal.	 User has tried to select a specimen thickness via the <u>+/-</u> button that is below the minimum value (0 μm) or above the maximum value (999 μm). 	• Release the <u>+/-</u> button.
Audible warning signal.		• The warning signal will
(When operating the instrument for the first time or after the E-EPROM has been exchanged.)		cease automatically after the initialization phase.
A clattering sound can be heard.	 The visible clamping screws have become loose during sectioning. 	 Retighten the loose clamping screws.

Note

These symptoms may occur from time to time and are unavoidable, as the clamping screws which have to be operated by the user cannot be sealed.



Warning

If the clattering sound does not cease once the clamping screws have been retightened, do not hesitate to call the Technical Service immediately.

Do not use the instrument when in this condition.

7. Cleaning and Maintenance

7.1 Cleaning the instrument

Warning

Always remove the knife / blade before detaching the knife holder from the instrument. Always put the knife (blade) back into the knife case or blade dispenser when not in use!

When using cleaners, comply with the safety instructions from the manufacturer and the labor-safety regulations at your laboratory.

When cleaning the outer surfaces, do not use xylene or solvents containing acetone or xylene. The finished surfaces are not resistant to xylene or acetone!

Ensure that liquids do not enter the interior of the instrument during cleaning.

Before each cleaning, carry out the following preparatory steps:

- Switch off the instrument and disconnect the power plug.
- Remove the blade from the knife holder and insert it in the receptacle at the bottom of the blade dispenser.
- Remove the knife holder for cleaning.
- Remove the specimen plate from the buffer tray and lay it flat on the stage. Carefully remove the specimen with a single-edge blade.
- Remove section waste using tweezers or a brush.
- Remove the buffer tray, empty it and rinse it separately with water (→ p. 28 5.6 Routine daily maintenance and switching off the instrument VT1000 S).

Instrument and outside surfaces

If necessary, the varnished outside surfaces of the control panels can be cleaned with a mild commercial household cleaner or soap water and then be wiped with a cloth.

The instrument must be completely dry before it can be used again.

Cleaning the knife



Warning

When cleaning the knife/blade, always wipe from the knife or blade back towards the cutting edge, NEVER wipe in the opposite direction - risk of injury!

Clean using an alcohol-based solution or acetone.

7.2 Changing the fuse

Warning

/!\

Before changing a fuse, always switch off the instrument first and remove the instrument cable completely. The instrument must have cooled down and the paraffin tank must be empty. When changing a fuse, do NOT use any fuses other than the spare fuses supplied with the instrument.

If the instrument fails completely, first check the power supply at the power socket.

Then check the fuses at the rear side of the instrument.

To do so, proceed as follows:

- Using a screwdriver (\rightarrow Fig. 28-1), carefully push out the fuse insert (\rightarrow Fig. 28-2).
- Remove the fuse insert it contains two fuses (\rightarrow Fig. 28-3).
- Check that the thin wire (→ Fig. 28-4) in the glass capillary of a fuse is intact. If not, replace the fuse (the standard scope of delivery includes two replacement fuses).

\triangle

Warning

Before plugging the power cable back in and switching on the instrument, you must have identified and corrected the cause of the burned-out fuse.

• Insert the fuse insert with the two fuses and start up the instrument again.

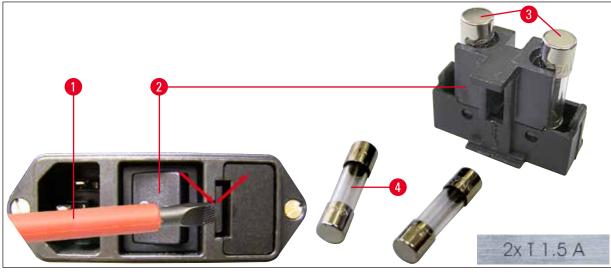


Fig. 28

8. Ordering Information: Spare Parts, Accessory, Consumables

8.1 Ordering information

Designation	Order No.	
Knife holder S	14 0462 30131	
Buffer tray S	14 0462 30132	
Buffer tray S, double-walled	14 0463 46423	
Specimen disc S, Ø 50 mm, non-directional	14 0463 27404	
Magnetic specimen holder, directional	14 0462 32060	
Foot switch with protective housing	14 0463 27415	
Magnifier, complete	14 0462 31191	
Module LED Hi-Power spots, 2-arm	14 6000 04826	
Module Hi-Power Spot, LED 1000	14 6000 04825	
Sapphire knife	14 0216 39372	
Cyanoacrylate glue	14 0371 27414	
Julabo FL300, recirculating cooler/chiller		
100 V/50/60 Hz	14 0481 48439	
115 V/50 Hz	14 0481 48437	
230 V/50-60 Hz	14 0481 48436	
230 V/60 Hz	14 0481 48438	
Antifrogen N	14 0481 45443	

8.2 Foot switch



Fig. 29

Foot switch

The foot switch is an optional accessory which can be used instead of the **<u>START/STOP</u>** button.

Order No.:

14 0463 27415

8.3 Buffer tray

Note

8.3.1 Double-walled buffer tray S

When using the double-walled buffer tray, the flow cooler must be installed according to the assembly instructions prior to working with specimens.



Fig. 30

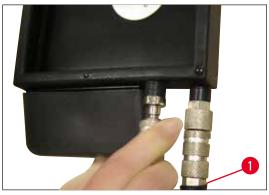


Fig. 31

A clamp for holding the gassing hose for the buffer in the proper position can be added to the double-walled buffer tray.

First connect the hoses ((\rightarrow Fig. 31-1), included in the standard delivery of the double-walled buffer tray) to the rear of the Julabo Recirculating Cooler/Chiller FL300, then connect the other end to the empty buffer tray. Access is easier if you make the left connection first. To do so, pull back the lock coupling, attach the hose, and release the coupling until you hear it click into position.

• Hose set for connecting a recirculating cooler/ chiller included.

Order No.:

14 0463 46423

8.4 Magnifier, LED illumination

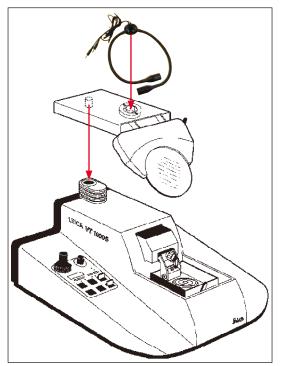


Fig. 32



Fig. 33

Magnifier

• To be inserted into the fixture.

Order No.:

14 0462 31191

Module LED Hi-Power spots, 2-arm

 To be mounted onto the magnifier after the magnifier has been mounted into the fixture. Then, connect the module LED Hi-Power spots, 2-arm, to the Module Hi-Power spot, LED 1000.

Order No.:

14 6000 04826

Module Hi-Power spot, LED 1000

• Serves as a light source for the module LED Hi-Power spots, 2-arm.

Order No.:

14 6000 04825

8.5 Julabo recirculating cooler/chiller FL300



Recirculating cooler/chiller for connection to the double-walled buffer tray in the VT1000 S and VT1200/VT1200 S.

Selectable temperature range: -20 °C to +40 °C.

Recommended cooling medium:Antifrogen N14 0481 45443Mixture with water (50 %/50 %)

Application example:

If (at an ambient temperature of 20 - 22 °C) a temperature of 4 °C is to be reached in the buffer trough, the setting value of 0.5 - 2 °C must be selected.

Fig. 34



Note

For additional information, refer to the Instructions for Use provided with this instrument.

9. Warranty and Service

Warranty

Leica Biosystems Nussloch GmbH guarantees that the contractual product delivered has been subjected to a comprehensive quality control procedure based on the Leica in-house testing standards, and that the product is faultless and complies with all technical specifications and/or agreed characteristics warranted.

The scope of the warranty is based on the content of the concluded agreement. The warranty terms of your Leica sales organization or the organization from which you have purchased the contractual product shall apply exclusively.

Service information

If you are in need of technical customer support or spare parts, please contact your Leica representative or the Leica dealer where you purchased the instrument.

Please provide the following information:

- Model name and serial number of the instrument.
- Location of the instrument and name of the person to contact.
- Reason for the service call.
- Delivery date

Decommissioning and disposal

The instrument or parts of the instrument must be disposed of according to existing applicable, local regulations.

10. Decontamination Confirmation

Every product that is returned to Leica Biosystems or that requires on-site maintenance must be properly cleaned and decontaminated. You can find the dedicated template of the decontamination confirmation on our website www.LeicaBiosystems.com within the product menu. This template has to be used for gathering all required data.

When returning a product, a copy of the filled and signed confirmation has to be enclosed or passed on to the service technician. The responsibility for products that are sent back without this confirmation or with an incomplete confirmation lies with the sender. Returned goods that are considered to be a potential source of danger by the company will be sent back at the expense and risk of the sender.

www.LeicaBiosystems.com



Leica Biosystems Nussloch GmbH Heidelberger Str. 17 - 19 69226 Nussloch Germany

Tel.: +49 - (0) 6224 - 143 0 Fax: +49 - (0) 6224 - 143 268 Web: www.LeicaBiosystems.com